




How to update your WD TV HD Media Player

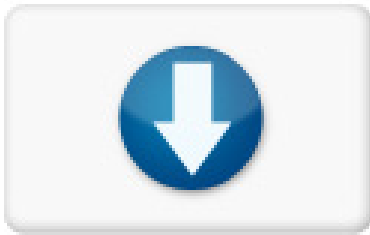

1. DOWNLOAD

Download the firmware update.



2. COPY

Extract the three files (.BIN, .VER, and .FFF files) to the root (top level) of a portable USB drive.



3. CONNECT

Connect the USB device and turn on WD TV and your television.



4. SELECT

Select settings from the on-screen menu, highlight the firmware upgrade icon and press Enter.



5. SELECT

Select OK and press Enter. This will restart the system.



3. RESTART

After restarting, the system automatically enters firmware upgrade mode. Once complete the system will automatically restart again and your system is ready to use.